


If you open or turn on your chromebook and see one of these screens, return your chromebook to your School Site for repair. Both issues can be caused by the Chrome OS auto-update feature.

Chrome OS corrupted and unable to start.

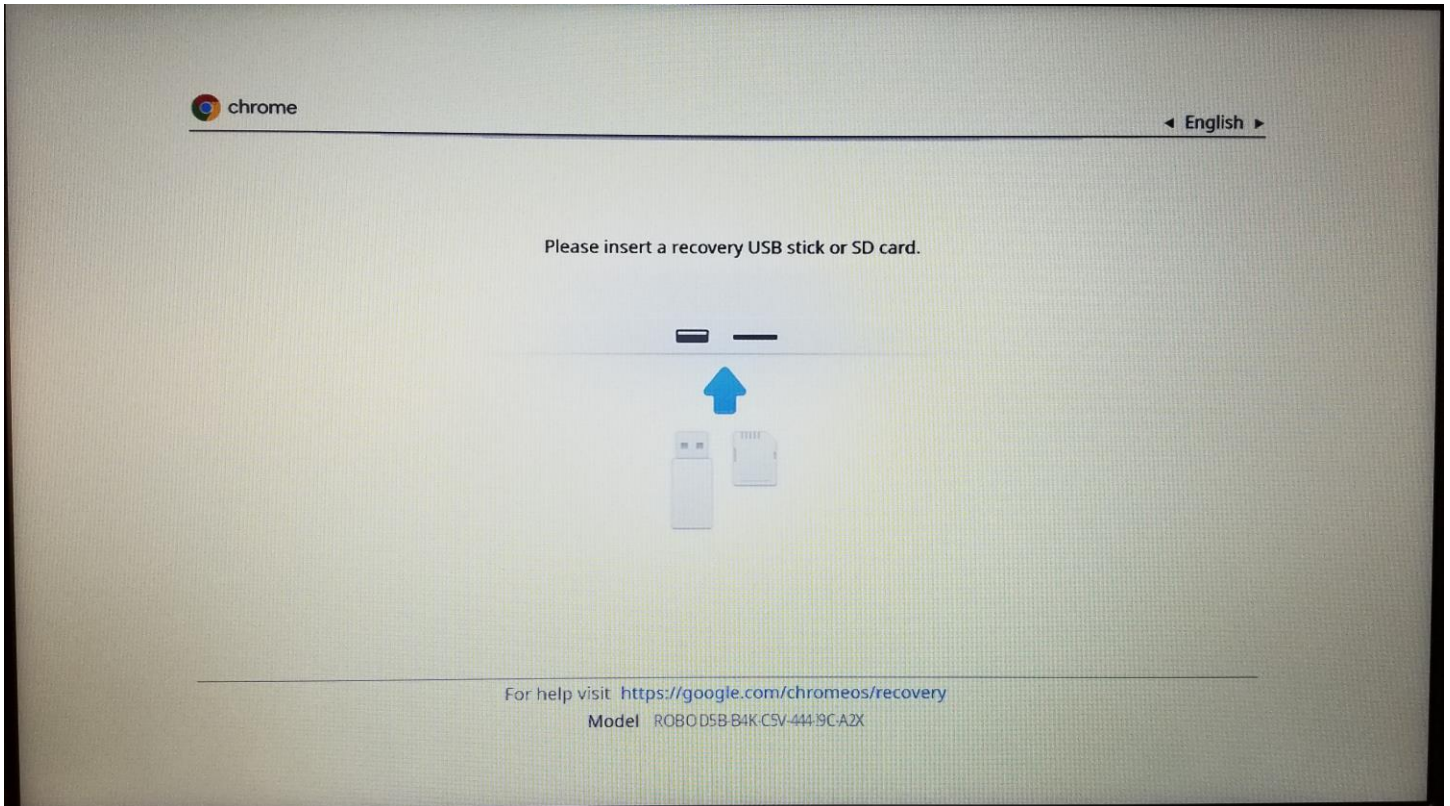

Not enrolled in the school district network.

